




RFID

INSTRUCTIONS



• FCC

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device does not cause harmful interference, and (2) this device accepts any interference received including interference that may cause undesired operation. This product has to be used to instructions provided with this kit. Any changing of assembling, technology or installation is not allowed.

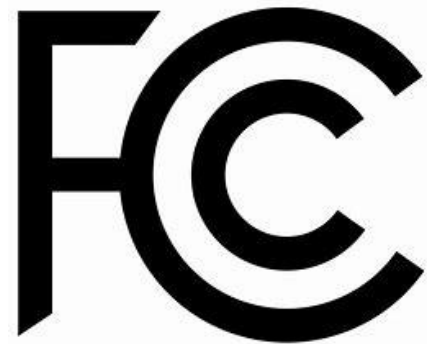

• RFID Activating the programmable card

1. Press the button on the rear side
2. The lock will make a ticking sound (signal). Hold the programmable card on the lock within 3 seconds of hearing this signal.
3. Two short ascending tones will confirm that the programming card has been saved successfully.



Initializing a key

Initializing the key card or chip key

1. Please place the programming card onto the lock.
2. The lock will make a ticking sound (signal). Place the key card or chip key onto the lock within 3 seconds of hearing this signal.
3. Two short ascending tones will confirm that initialization was successful. 4. The lock can now be opened using the key card or the chip key.

Tip: A maximum of 49 different keys can be initialized.

Deleting the key card or chip key

Key access denied

1. Please place the programming card onto the lock.
2. The lock will make a ticking sound (signal). Place the key card or chip key onto the lock within 3 seconds of hearing this signal.
3. Two short ascending tones will confirm that deletion was successful.

To delete all keys at once, place the programming card onto the lock for several seconds.

Attention. If all keys are deactivated, the installed updates will also be deactivated.

