

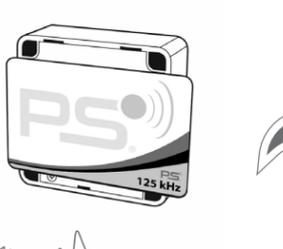
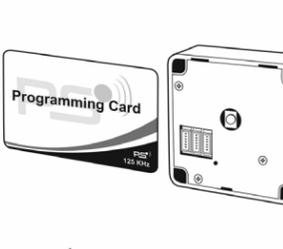
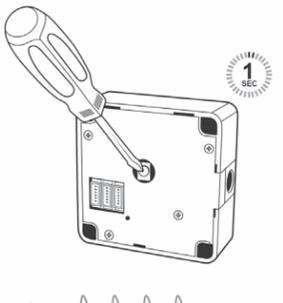
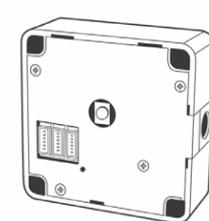
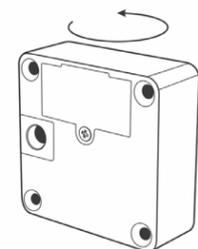
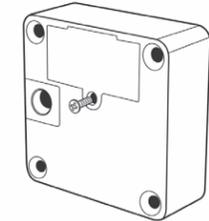


PROGRAMMING

1

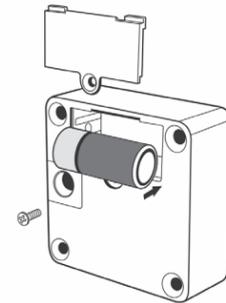

TROUBLESHOOTING

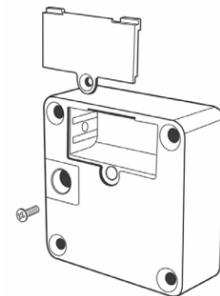

Lock is open and the keys are not working:

- The battery low alarm was activated.
- Please insert a new battery.

Key is not working:

- Is there any sound? If so, please try to activate the key with the programming card.
- No sound: Try to find the right position at the furniture. The keys have a higher range if you place them fast at the right point than moving slowly.

I lost my key:

- Delete all keys with the programming card.
- Activate all keys again.

The programming card does not work:

- Do you have a second card?
- If not, please unscrew the locks, press the button on the backside and teach the lock the programming card again.

Motor runs, lock stays locked:

- Maybe there is some pressure on the bolt in the lock.
- Move the door in all possible directions and try it again.
- Press the door in and use your key again.
- Adjust the locking devices after such a problem.

No sound with any card:

- Use a flat iron part (not a screwdriver) and break up the furniture. The rated breaking point at the latch will save the furniture.





Melissau 1255, 6863 Egg, Austria


www.pslocks.com • info@pslocks.com

DOORS


1

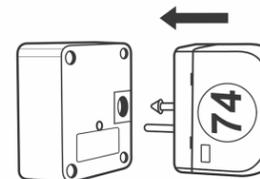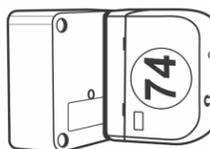


2

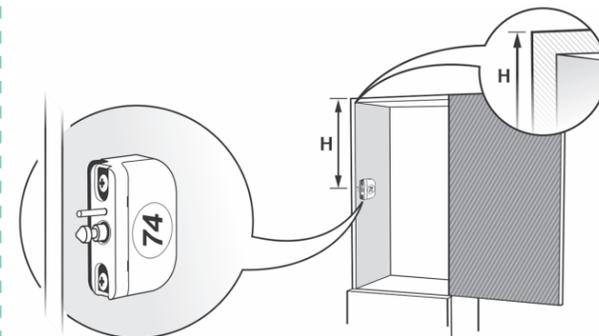


3

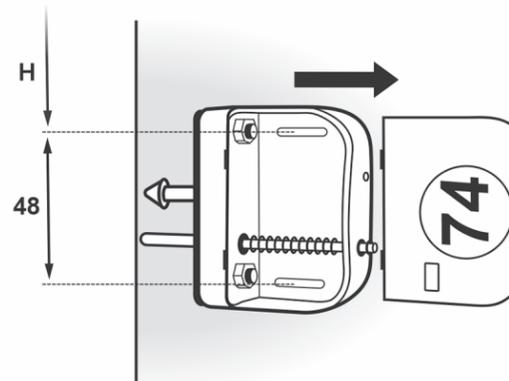


4

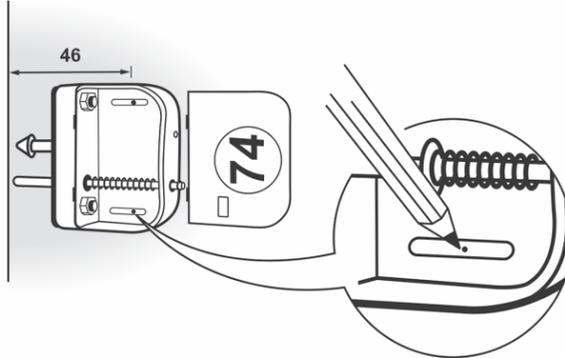


5

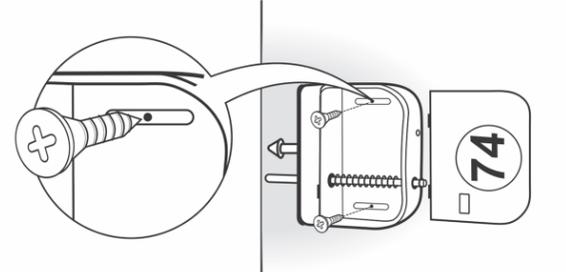


6

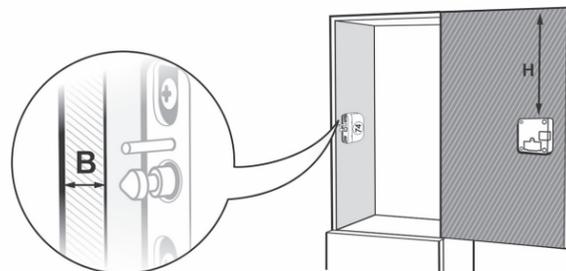


7

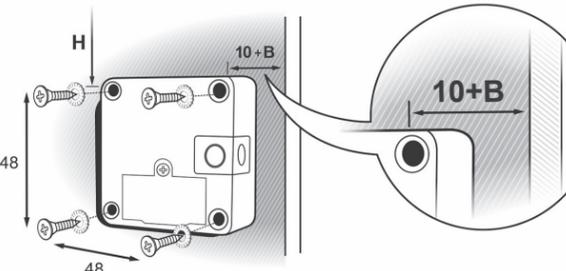

8

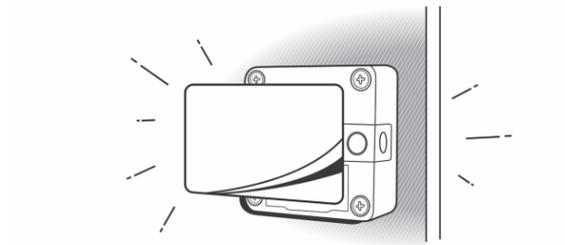

9

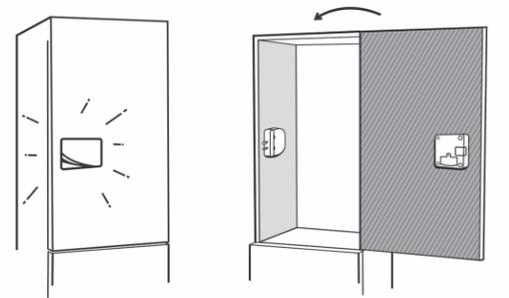

INSTALLATION INSTRUCTIONS

SLIDING DOORS


SECURITY ADVICE

$> 10\text{cm}$
 $> 0,4''$



INSTALLATION INSTRUCTIONS

DRAWERS

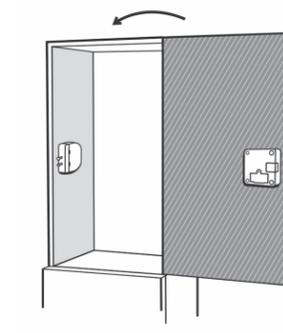

Electronic locks • Made in AUSTRIA

Technical support: +43 699 1333 5155

5 YEARS REPLACE WARRANTY