



www.pslocks.com

PS GmbH  
Melisau 1255  
6863 Egg | Austria  
FN 326841 z | ATU64996348

 
# RFID

## INSTRUCTIONS



### FCC

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device does not cause harmful interference, and (2) this device accepts any interference received including interference that may cause undesired operation. This product has to be used to instructions provided with this kit. Any changing of assembling, technology or installation is not allowed.

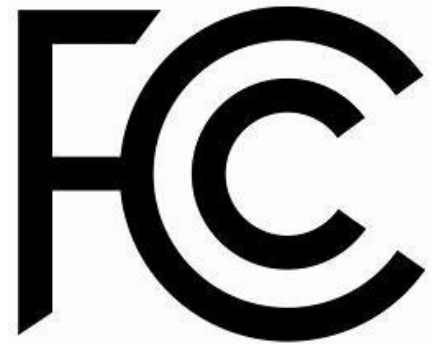

### RFID Activating the programming card

Before mounting

1. Press the white button in the middle on the back side of the lock.
2. The lock will make a ticking sound (signal). Place the card to the lock within 3 seconds during the signal.
3. Two short ascending tones will confirm that the programming card has been saved successfully.



## Initializing a key

Initializing the key card or chip key

1. Please place the programming card onto the lock.
2. The lock will make a ticking sound (signal). Place the key card or chip key onto the lock within 3 seconds of hearing this signal.
3. Two short ascending tones will confirm that initialization was successful. □□  
The lock can now be opened using the key card or the chip key.

Tip: A maximum of 49 different keys can be initialized.

## Deleting the key card or chip key

Key access denied

1. Please place the programming card onto the lock.
2. The lock will make a ticking sound (signal). Place the key card or chip key onto the lock within 3 seconds of hearing this signal.
3. Four short sounds confirm that the key has been deleted.

**Deleting all keys:** You can delete all keys at once by holding the programming card to the lock for 15-20 seconds until a long signal appears as confirmation.

