


RFID INSTRUCTIONS

FCC

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device does not cause harmful interference, and (2) this device accepts any interference received including interference that may cause undesired operation. This product has to be used to instructions provided with this kit. Any changing of assembling, technology or installation is not allowed.

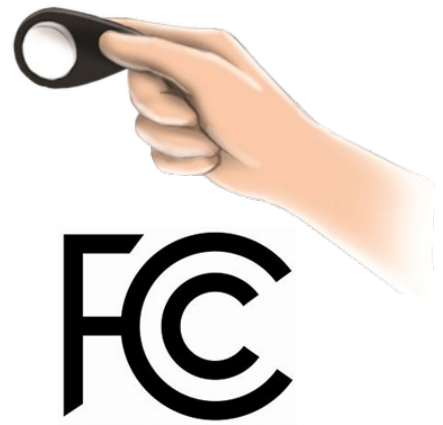

RFID Programmcard activating

Before mounting

1. Press the white button in the middle on the back side of the lock.
2. The lock will make a ticking sound (signal). Place the card to the lock within 3 seconds during the signal.
3. Two short ascending tones will confirm that the programming card has been saved successfully.

Initializing the key card or chip key


1. Please place the programming card onto the lock.
2. The lock will make a ticking sound (signal). Place the key card or chip key onto the lock within 3 seconds of hearing this signal.
3. Two short ascending tones will confirm that initialization was successful. 🗑️🔑 The lock can now be opened using the key card or the chip key.

Tip: A maximum of 49 different keys can be initialized.

Deleting the key card or chip key

1. Please place the programming card onto the lock.
2. The lock will make a ticking sound (signal). Place the key card or chip key onto the lock within 3 seconds of hearing this signal.
3. Four short sounds confirm that the key has been deleted.


Deleting all keys: You can delete all keys at once by holding the programming card to the lock for 15-20 seconds until a long signal appears as confirmation.

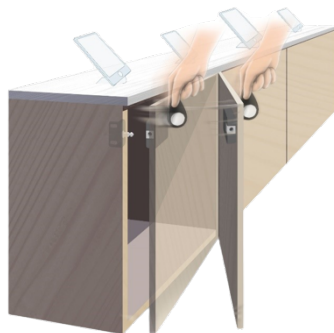

RFID ANLEITUNG

FCC

Dieses Gerät entspricht den Anforderungen der FCC-Richtlinien, Teil 15. Der Betrieb ist an folgende beiden Voraussetzungen geknüpft: (1) Dieses Gerät ruft keine schädlichen Störungen hervor und (2) dieses Gerät kann sämtliche empfangenen Störungen aufnehmen, einschließlich jener, die seinen Betrieb beeinträchtigen. Dieses Produkt darf nur in den dafür vorgesehenen Verwendungszweck gemäß dieser Anleitung verwendet werden. Das Gerät darf nicht in der Montage oder Installation verwendet werden. Zudem sind Änderungen an Einzelteilen und Technologie untersagt.

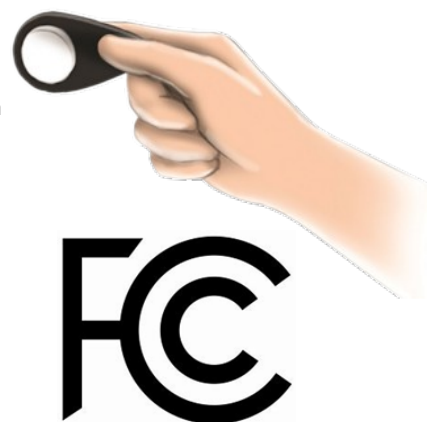

RFID Programmierkarten aktivieren

Vor der Montage

1. Drücken Sie den Taster an der Rückseite.
2. Im Schloss ertönt ein Tick-Signal. Halten Sie nun innerhalb von 3 Sekunden die Programmierkarte an das Schloss.
3. Zwei kurze aufsteigende Töne bestätigen nun, dass die Programmierkarte erfolgreich gespeichert wurde.

Schlüsselkarte oder -chip einlesen

1. Legen Sie die Programmierkarte an das Schloss.
2. Im Schloss ertönt ein Tick-Signal. Halten Sie nun innerhalb von 3 Sekunden die Schlüsselkarte oder den Schlüsselchip an das Schloss.
3. Zwei kurze aufsteigende Töne bestätigen nun, dass das Einlesen erfolgreich war.
4. Das Schloss kann nun mit der Schlüsselkarte oder dem Schlüsselchip geöffnet werden.

Hinweis: Es können pro Schloss maximal 49 verschiedene Schlüssel eingelesen werden.

Löschen der Schlüssel und Karten

1. Legen Sie die Programmierkarte an das Schloss.
2. Im Schloss ertönt ein Tick-Signal. Halten Sie nun innerhalb von 3 Sekunden die Schlüsselkarte oder den Schlüsselchip an das Schloss.
3. Vier gleiche kurze Töne bestätigen nun, dass das Löschen erfolgreich war.

Alle Schlüssel löschen: Sie können alle Schlüssel gleichzeitig löschen, indem Sie die Programmierkarte 15-20 Sekunden an das Schloss halten bis ein langanhaltender Ton das Löschen aller Karten bestätigt.

